


LD1000

Label your products quickly and cost-effectively

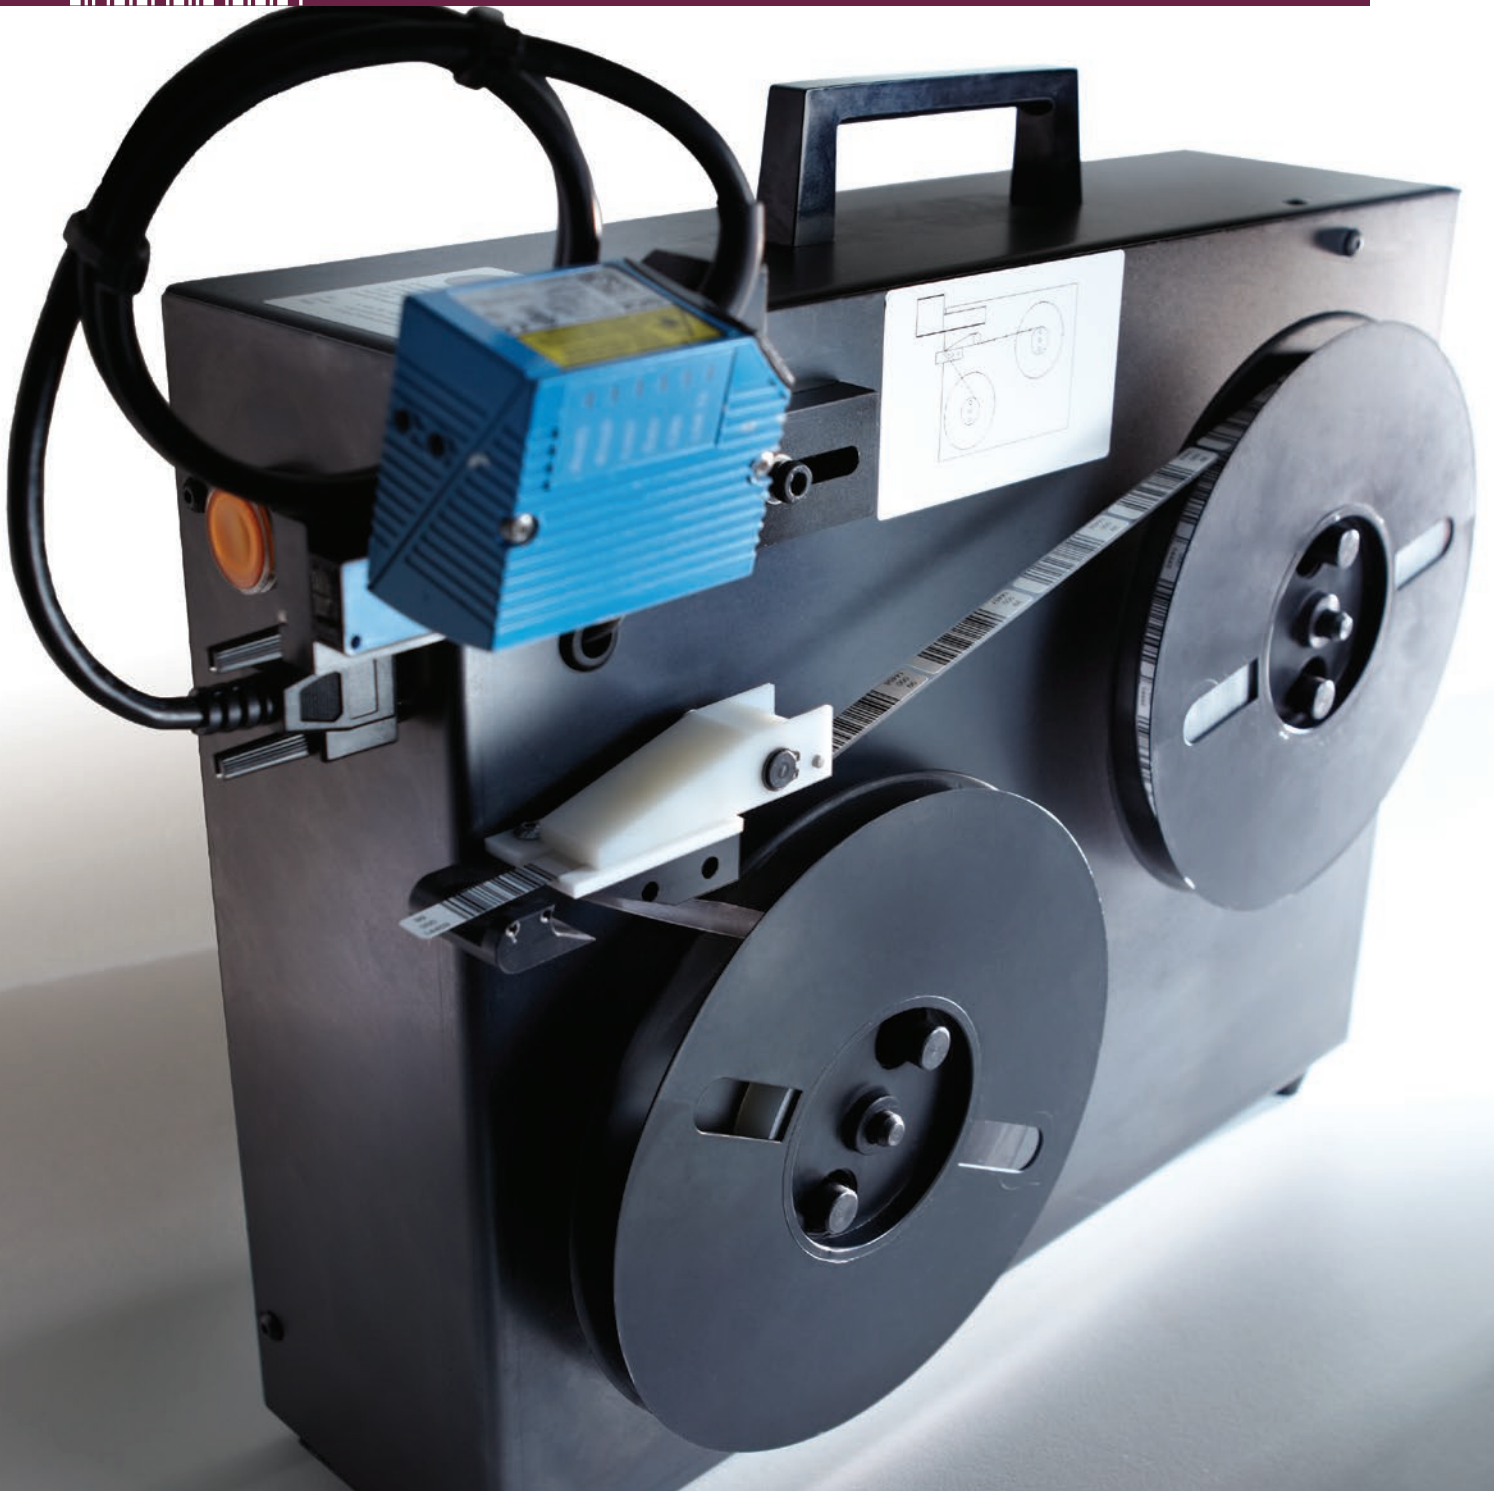

This easy to use, label dispensing machine is a quick way to help label your products cost-effectively. Bridging the investment gap between manual 'peel and apply' to full automation, this dispenser is a great alternative. With a Plug and play set-up, the unit easily integrates into your manufacturing/production line and increases your operators' efficiencies.

The LD1000 prepares the label for application on your product by stripping off the backing and positioning each label for easy removal, activated by a sensor the LD1000 knows when to present the next label.

Technical Specification

Height: 20cm
Width: 8cm
Length: 15cm
Weight: 13kg

Electrical

Current: 200W for 115 VAC units
100W for 220 VAC units
Voltage: 115 VAC or 240 VAC 50-60Hz
Communication: RS232 (can attach to host system)
Set-up: Plug and Play

Min Label Size: 10mm x 30mm
Max Label Size: 80mm x 50mm

1 Years warranty as standard
CE Marked

* Supplied with power cord to suit local requirements.



EASY TO SET-UP & USE

The LD1000 is delivered to you ready to use – simply plug in and you are ready to go. A clever alarm system is built in to notify your operators when labels are missing, or if you have the scanner option, when the scanner hasn't read the label. If you have any questions our friendly technical team are available to help.

COST EFFECTIVE ALTERNATIVE TO AUTOMATION

Automation can be expensive; this alternative solution can help speed up the process without big budgets. The LD1000 saves time for your operators by simplifying the process of removing the label from its backing, ready for easy removal at the tip of the finger. Known for its reliability the LD1000 stands the test of time: no costly maintenance, replacement parts or service checks required.

LIGHT & FLEXIBLE

Only 13kg makes this light weight applicator portable, enabling you to move it around easily. It works with a large range of label sizes to suit your product. The applicator can also easily integrate into your systems or work as a standalone unit.

OPTIONAL EXTRAS

We have a range of scanners to suit your hardware preferences, just ask one of the team to run through the options.

Looking for an automated system?
Ask us about the LA3100.

European HQ

Connaught Road
Kingswood Business Park
Kingston upon Hull
HU7 3AP
United Kingdom

+44 (0)1482 835366

contactus@computype.com

www.computype.com/en-gb

